

Bassine - Rm 251

(TEC classroom – level B)

No Access Codes Needed.

These rooms utilize ceiling-mounted projectors, focused on wall-mounted pull down screens.

Displaying Video or Computer Sources

1. At the Instructor Station. Push **DOWN** on the black system controller to access controls. Touch the screen to begin.
2. Press the **PC (or any source)** button to turn on the display system. The projector will take over a minute to warm up. **No controls will function during warm up.**
3. After the warm up, you can select another source using the appropriate buttons. *(Buttons illuminate when active.) It's recommended to wait a few seconds between input selections.*
 - **PC** will display the installed Instructor PC. *There are courtesy USB ports on the front of the PC.*
 - **LAPTOP** will open another page, where you can select the **VGA** cable w/audio or the **Digital HDMI** cable as your laptop source. These cables are provided at the instructor station. Beyond the buttons, *the system will attempt to auto-detect, and switch to a laptop when properly connected. Users must provide their MAC & DisplayPort adapters.*
 - **DVD** selects the DVD player, stored at the Instructor Station. A disc control page will appear on the touch panel allowing you to control the player.
 - If a VHS player exists in your room, a VCR button will appear as a source on the touch panel. Press VCR to select. If there is no VHS player, contact Media Technology Services (MTS: 781- 736-4632) to request a temporary unit. Legacy VHS stock is declining, and this is based on inventory availability.
 - The **AUX** button activates front rack-panel inputs, allowing you to connect external video devices, such as a VHS player or camcorder.
4. PC LOGON: ***Use your UNET name and password, in the USERS domain. ***
5. *Laptops going wireless may be logged on using your UNET name and password, or as a guest account, using a personal email address. Open a browser to access the log on process.*
6. The **MUTE IMAGE** button blacks out video and audio. Press it again to return to your presentation.

Audio Controls

1. Pressing the right side **VOLUME up**, **VOLUME down** and **MUTE** buttons will control your levels. These buttons are to the right of the small touch panel.
2. Additional microphone controls exist when pressing the **ADV. AUDIO** button for those recording / capturing with a microphone or sending to an Assisted Listening Device.

Playing Audio through the system

1. *You can play audio discs and files through the PC, your laptop or tablet, or the DVD player, by pressing the source button for your chosen device.*
2. You can also play audio by connecting your portable media player to the stereo mini (3.5mm) connector on the rack input plate. You do not need to select a source to play audio in this manner.



When Finished

To finish and shut down, press the **EXIT SYSTEM** button, and confirm by pressing **YES**. Be sure the projector begins to power off with its 90 second cool down process. **Please shut off the projector to save lamp life!**