

Slosberg 212

(TEC classroom – level B)

This room utilizes a ceiling-mounted projector, focused on a wall-mounted pull down screen.

No Access Codes Needed.

Displaying Video or Computer Sources

1. At the Instructor Station. Push DOWN on the black system controller to access controls. Touch the screen to begin.
2. Press the **PC (or any source)** button to turn on the display system. The projector will take over a minute to warm up. **No controls will function during warm up.**
3. After the warm up, you can select another source using the appropriate buttons. (*Buttons illuminate when active.*) **It's recommended to wait a few seconds between input selections.**
 - Press the **PC/LAPTOP** button to display either the installed Instructor PC or a user-provided laptop. **There are courtesy USB ports on the front of the Instructor PC.** The vga cable is provided at the instructor station. **When PC/LAPTOP has been pressed, the system will auto-detect and switch to a properly connected laptop.**
 - Press the **HDMI** button to activate the **Digital HDMI** cable as your laptop source. This cable is provided at the instructor station. Beyond the buttons, **the system will attempt to auto-detect, and switch to a laptop when properly connected.** **Users must provide their MAC & DisplayPort adapters.**
 - Press the **DVD** button to select the **DVD player**. A disc control page will appear on the touch panel allowing you to control the player.
 - Press the **VCR** button to select the **VHS player**, if one exists in your room, **The VCR button will be marked as inactive if there is no VHS player in your room.** Please note: legacy VHS stock is declining.
 - Press the **CD** button to select the installed **CD player**. A disc control page will appear on the panel allowing you control.
 - The **AUX AV** button activates front rack-panel inputs, allowing you to connect external video devices, such as a VHS player or camcorder.
 - You can also **play audio** by connecting your mobile device/media player to the stereo (3.5mm) connector on the rack panel. **This input is always active.**
4. **PC LOGON:** ***Use your UNET name and password, in the USERS domain. ***
5. **Wireless laptops** may be registered using your UNET name and password, or you can logon as a guest, using a personal email address. Open a browser to access the log on process.
6. The **IMAGE MUTE**, **AUTO-IMAGE** and **ASPECT RATIO** buttons allow further adjustment of images on the screen

Audio Controls

1. Be sure the **SOURCE VOLUME** button is selected. Then, press the **VOLUME ^**, **VOLUME v** arrows, or the **MUTE** button to control audio levels.
2. If a microphone is connected, these buttons will control them after you press the **MIC VOLUME** button. Microphone usage would typically be viable for those recording / capturing or sending to an Assisted Listening Device.



When Finished

To finish and shut down, press the red **SYSTEM OFF** button, and confirm by pressing **POWER DOWN**. **SAVE LAMP LIFE:** Be sure the projector begins to power off with its 90 second cool down process!