

Abelson 229 (TEC classroom – level B)

NO access code needed.

This room utilizes a manual, pull down screen.

Displaying video sources

1. Use the black, System Controller on top of the Instructor Station. Push DOWN on the cover to access the pop-up controls. The station rolls about 5' in the instructor area! *Roll back when done!*
2. Press the **PROJ ON** button. Projector will take 45 seconds to warm up. *No controls will function during warm up.*
3. The most recent input will be displayed in the screen's corner.
4. **After the warm up period, you MUST select your preferred input using the appropriate buttons. (Buttons illuminate when active.)** There is a seven (7) second lock out period after input selection, when you cannot jump to another source. **Just re-select your source after the 7 seconds.**
 - a. **PC/LAPTOP** will display the PC, installed inside the station. *There is a front courtesy USB jack on the PC.*
 - b. **Laptop connections** are provided via a VGA cable with an attached audio cable, accessed thru a side grommet opening. The system will **auto-detect**, and switch to a laptop when properly connected. A power plug is available in the control station.
 - c. **DVD/VHS** selects the combination DVD/VHS player, stored inside the Instructor Station. You may operate the video devices using controls on each unit, or with provided remote. Point the remote at the station's IR eye. *Note well: If you do not see an image, but do hear audio, just wait a few seconds and re-select your source.*
5. **PC LOGON:** ****Use your UNET name and password, in the USERS domain. ****
6. **Laptops with wireless cards may be logged on using your UNET name and password, or as a guest account, using a personal email address. Opening a browser directs you to the log on process.**
7. The **AUTOIMAGE** button will let you adjust the projector to attempt proper sync with your laptop. We recommend XGA resolution (1024x768) for best results.
8. The **AV MUTE** button blacks out video and audio. Hit it again to return to your presentation.



Audio Controls

1. Simply hit the **AUDIO up** and **AUDIO down** buttons to control your levels.
2. The **AUDIO MUTE** button will mute all sound levels. Just hit it again to regain sound.

Playing Audio CD's

Audio CDs can be played through the DVD player.

1. Insert your CD into the DVD player.
2. Press the **DVD/S-VIDEO** button.
3. *An audio CD may also be played thru the PC's DVD drive.*

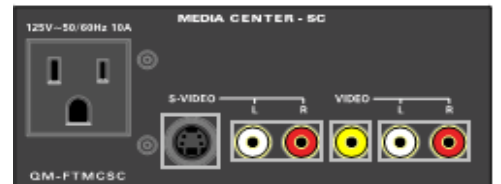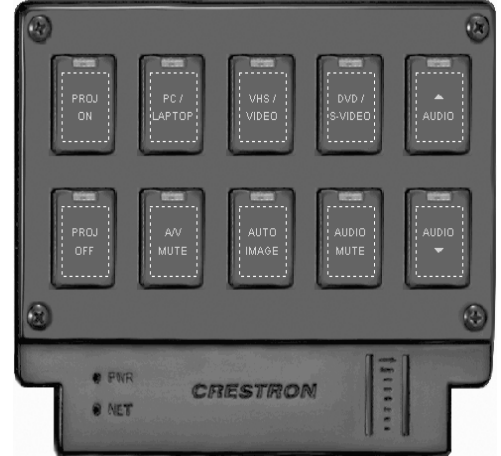

When Finished

1. Press the **PROJ OFF** button. Be sure the projector begins to power off with its 90 second cool down process. **It is important to shut off the projector to save lamp life!**
2. Close the pop up control station.
3. Return any remote controls to the station.

**FOR FURTHER ASSISTANCE:
CALL MEDIA TECHNOLOGY
SERVICES AT EXT. 6-4632 OR
EXT.6-4429.**

