

Golding 101 *(TEC classroom – level B)*

This room utilizes ceiling-mounted projector, focused on a wall-mounted pull down screen.


Displaying video sources

1. Use the black, System Controller on top of the Instructor Station. Push **DOWN** on the cover to access the pop-up controls. The station rolls about 6' in the instructor area! *Roll back when done!*
2. Press the **PROJ ON** button. Projector will take 45 seconds to warm up. *No controls will function during warm up.*
3. The most recent input will display in the corner of the screen.
4. **After the warm up period, you MUST select your preferred input using the appropriate buttons. (Buttons illuminate when active.) There is a seven (7) second lock out period after input selection, when you cannot jump to another source. Any trouble? Just re-select your source after the 7 seconds.**
 - **PC/LAPTOP** will display the installed PC or your laptop, auto-switching to it upon proper connection.
 - Laptop connections are provided via a VGA cable w/ an attached audio connector, accessed thru a side, circular grommet opening. When properly connected, the **auto-detects**, and switches to a laptop. A power plug is available in the control station. *MAC users should provide their own MAC adapter.*
 - **DVD/S-VIDEO**: selects the DVD player, inside the Instructor Station.
 - **VHS/VIDEO**: As of 8/2011, due to failing equipment, legacy VHS playback is discontinued in Golding 101.
 - **EXTERNAL** video/audio sources may be presented (such as a VHS player). Simply plug into one of the inputs, under the control buttons. System will **auto-detect** & display. Contact MTS (6-4632) for further assistance.
5. **PC LOGON: **Use your UNET name and password, in the USERS domain. ****(USB jack – front left PC)
6. Laptops with wireless cards may be logged on using your UNET name and password, or as a guest account, using a personal email address. Opening a browser directs you to the log on process.
7. The **AUTOIMAGE** button will let you adjust the projector to attempt proper sync with your laptop. *We recommend XGA resolution (1024x768) for best results.*
8. The **AV MUTE** button blacks out video and audio. Hit it again to return to your presentation.

Audio Controls

1. Simply hit the **AUDIO ^** and **AUDIO v** buttons to control your levels.
2. The **AUDIO MUTE** button will mute all sound levels. Just press it a 2nd time to regain sound.
3. A **wireless clip-on microphone** is available inside the Instructor Station. Volume levels are pre-set and should not be adjusted. A spare battery should be available in the station.

No access code needed

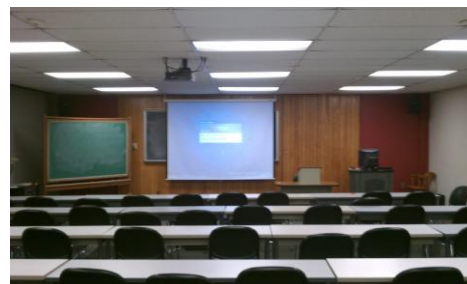

Playing Audio CD's

Audio CDs can be played in either the DVD player, the PC or a laptop.

1. Insert your CD into your device of choice.
2. Press the **proper source** button and follow normal playback operation.

When Finished

1. Press the **PROJ OFF** button. Be sure the projector begins to power off with its 90 second cool down process. **It is important to shut off the projector to save lamp life!**
2. Close the pop up control station.
3. Return any remote controls or accessories to rack storage.
4. Close the access door to the Instructor station.

